

Upgrade Guidance for HD Cameras

This firmware is for HD cameras V4EC, G4C, R3, R4M V3, R4M V5, X3, X3E, X5, R5, X4, C2M V6, D2EP V2, MCS2021, MCS4020, MDS2011, MGS4050, MGS4060, MPS4012, MPS4050, MPS4051, MPS4060, MPS4061, MPS5010, MPS5013, MPS5020, MPS5023, MPS5040, MPS5050, MPS5041, MPS5051. Please check your camera model on the bottom sticker. Updating with the wrong firmware could severely damage and/or break your camera. Please make sure the firmware is correct.

Please do not power off the camera during upgrade. Otherwise, the camera may be broken.

Step 1: Login your camera from Foscam VMS, go to **Settings-->System-->System Upgrade**. Click Browse/Choose File, find the correct firmware file [FosIPC_P_app_ver2.x.2.47.bin](#) you've extracted in your local hard driver, then click **Open**. Camera will upgrade after you click on **System Upgrade**.

Step 2: After that completed, please go to check if the firmware version becomes the latest.

Congratulations, your camera successfully upgraded to the latest firmware!

End

--- By Foscam Technical Support Team