

## Upgrade Guide for FN9108HE/FN9108H

This firmware is for NVR FN9108HE/FN9108H/FN9108E, please check your NVR model on the sticker. Updating with the wrong firmware could severely damage and/or break your NVR.

**Method 1:** Update firmware on Foscam VMS.

**Step1:** Log-in your NVR on Foscam VMS, go to **System→System Upgrade**

Click **Browse** →choose the

**FOSCAM\_NVR6810E\_V6.2.135.140000.update** file, click **Open**→click **Upgrade**.

**Step 2:** “Upgrading, do not power off ... Xs” pop up.

Then NVR will reboot itself, DO NOT power off NVR. Please wait for NVR re-connection after firmware upgraded.

**Step 3:** Log-in your NVR again to check the **Firmware Version**.

**Method 2:** Upgrade firmware on **Monitor with USB disk**.

**Step1:** Copy the

**FOSCAM\_NVR6810E\_V6.2.135.140000.update** file to USB disk main directory, insert the USB disk to the NVR.

**Step2:** Log-in your NVR on Monitor, right click and go to **Main Menu→Upgrade**

**Refresh** to find the firmware file to do the upgrade.

**Note:** During upgrading, NVR will reboot itself, DO NOT power off the NVR.

**Step3:** After upgrading, right click and go to **Info→Version** to check your NVR **Firmware version**.

**End**

--- By Foscam Technical Support Team