
FOSCAM
home security

Quick Setup Guide

PoE IP Camera

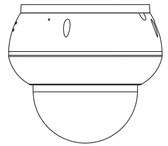


To view this guide in other languages (e.g. Nederlands, Deutsch, Français, Español), and for detailed manuals, tools, etc., please visit **foscam.com/downloads**.

V1.1
305503001218

Setting Up Your Foscam Security Camera

1 *Getting Started*

■ Package Contents

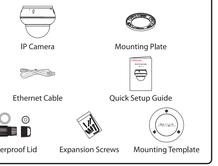


■ Safety Tips

- Please change the camera's password regularly, using a combination of numbers, letters and special characters.
- We recommend that you regularly update your camera with the latest available software and firmware to ensure the best experience with your camera.

- Please ensure that the proper power supply is used before using the camera.
- Do not use the device where wireless devices are not allowed.
- Do not disassemble, repair or modify the product.
- Do not use the product if the casing has been broken. Danger of electric shock.
- Please install the camera securely using the screws provided.
- Change the default port in your camera to a port in the higher range to improve the security of your connection.
- To avoid the risk of fire or electric shock, please keep your camera connectors in a cool, dry place.
- Please keep the camera out of reach of small children.
- Operating Temperature: -20°C ~ 50°C (-4°F ~ 122°F).

2 *Physical Description*

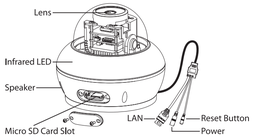

3 *Setting Up Your Camera: Connection via the Foscam App (Recommended)*

■ Before You Get Started

Scan the QR code below to download and install the Foscam APP.

GET IT ON Google Play
Available on the App Store

To ensure a smoother video experience on your smart phone, it is recommended that your smart phone meet the following specifications:


- iOS: Version 12.1 or higher.
- Android: 6.0 or higher, using a device with a Graphics Processing Unit (GPU).

Note: For the best experience, please update the APP to the latest version!

■ Wired Connection

1. Connect the camera to your POE Switch or POE NVR with an Ethernet cable, and please wait for a few seconds until hearing the "**Wired connection succeeded**".

2. Make sure your smart phone is connected to the same WiFi network as the camera.

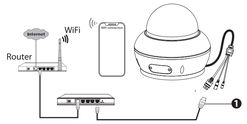



Tips: Please make sure that the smartphone and camera are on the same Wi-Fi.


3. Open the Foscam APP and please register a Foscam account, or sign in if you have one already.



4. Follow the steps below:

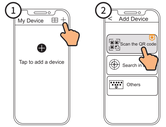

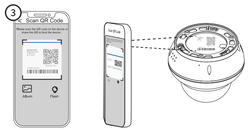

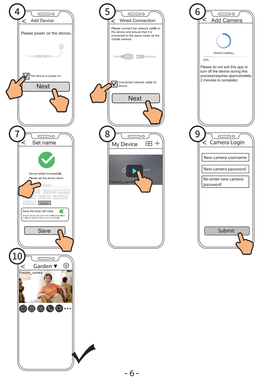

4 *PC Access Your Camera*

■ Foscam VMS

Foscam VMS is a new tool for PCs. It does not require plug-ins and is compatible with Windows & Mac, supporting up to 64 cameras for Windows & 36 cameras for Mac at the same time. If you would like to manage multiple cameras, we suggest you install Foscam VMS. You can download the "Foscam VMS" Windows version from **foscam.com/vms**, and can download the "Foscam VMS" Mac version from the APP store: **https://apps.apple.com/cn/app/foscamvms/id1521202507?mt=12**

Note: For the best experience, please update Foscam VMS to the latest version!

Add the IP Camera:

1. Run Foscam VMS, then create either a local administrator account or a Foscam account, and log in.
2. Tap the "+" icon on the Foscam VMS and follow the setup wizard to add your camera.

Please visit **foscam.com/downloads** to view the user manual and for additional detailed steps.



5 *Hardware Installation*


■ SD Card Installation (Optional)

1. Screw off the micro SD cover and Insert a micro SD into the SD card slot (If you don't want to use SD card for storage, skip this step).



■ Camera Mounting


1. Rotate the housing and mounting plate in the opposite direction until points a and b are aligned to remove the mounting plate.

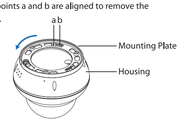


2. Install the sticker for positioning in the needed area.




Note: For the best visuals, we suggest mounting the camera in a position that is at least 30cm (11.8in) away from the left and right walls.



3. Install the mounting plate of the device on the wall with proper expansion screws as below.

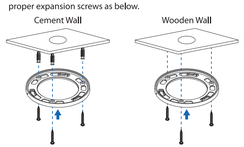

4. Align points a and b to insert the camera base into the mounting plate. Rotate so that points a and b are no longer aligned: this attaches the camera securely to the base. After installing the camera on the mounting plate, tighten the screw on the mounting plate to prevent theft.

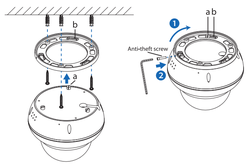

5. Follow the steps in "**3 Setting Up Your Camera**" in this guide to add the device on the Foscam app.

6. Control the angle of the lens in the Foscam app.

6 *Important Notice*

■ Camera Username & Password

The camera username & password are used to access and manage your camera. Having a strong password can significantly improve the security of your camera. If you have forgotten either of them, please press the "Reset" button.



Press and hold the "Reset" button for 3-5 seconds.

■ Storage Media

Your camera supports cloud, NVR (Network Video Recorder), and Micro SD card (supports FAT32 and exFAT format) storage formats.



■ How to format Micro SD card, please follow the steps below:



4. Scan the QR code below to download the "FoscamFormat" Tool

foscam.com/downloads/app_software.html

5. Open the "FoscamFormat" Tool














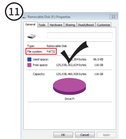

7 *Product Performance*

Power Supply: DC 12V 2.0A 24W

8 *FAQs*

Q1: Does it come with power supply? how to connect to power?
A: It does not come with a power supply. You must add a POE (Power Over Ethernet) injector. Power is then supplied from the POE injector to the camera through the ethernet cable.

Q2: Does the camera require wifi?
A: It's a POE camera. Power Over Ethernet. It requires an ethernet cable that delivers power and a signal to your LAN. You need a switch or router capable of delivering POE.

Q3: Specification of Ethernet Cables that PoE Cameras Require?
A: PoE cameras support T-568B connectors and CAT5, CAT6, CAT7 with 8-pin Ethernet cable.

Q4: Can this be powered with a battery pack in case of power outage or tampering?
A: It's powered through the Ethernet cable from your NVR. If you put your NVR on UPS the camera will stay powered as long as the NVR is powered on.

FOSCAM
home security

CE Certificate statement Website:
https://www.foscam.com/company/ce-certificate.html

Exporter and Importer Information Opened to Public:
https://www.foscam.com/company/open-information.html

Manufacturer: Shenzhen Foscam Intelligent Technology Co., Ltd
Addr: Room 902, Building 1B, Shenzhen International Innovation Valley, Xingke 1st Street, Nanshan District, Shenzhen, Guangdong, China, 518055

FAQS | Foscam APP | Facebook

www.foscam.com

Due to product upgrades and other reasons, this guide may be slow to update, resulting in slight inconsistencies with the official website information. Please take the official website (www.foscam.com) information as the current standard.